

CLARENDON DRESSER 4 DRAWER

23508446

freedom 

Thank you for purchasing the **CLARENDON DRESSER 4 DRAWER**. Before you begin to assemble your new piece of furniture, please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).

Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.


If you experience any problems with your new purchase please phone Freedom Customer Service (FCS) on **1300 135 588**. Customers outside Australia should contact their closest Freedom store.

Care Information

Timber

Periodically check and re-tighten any fasteners. Dust weekly using a soft, clean cloth. Do not use harsh abrasives, chemicals or polishes containing silicone. Avoid direct sunlight as this will cause the timber to change colour. It is important to remove moist substances immediately.

Parts

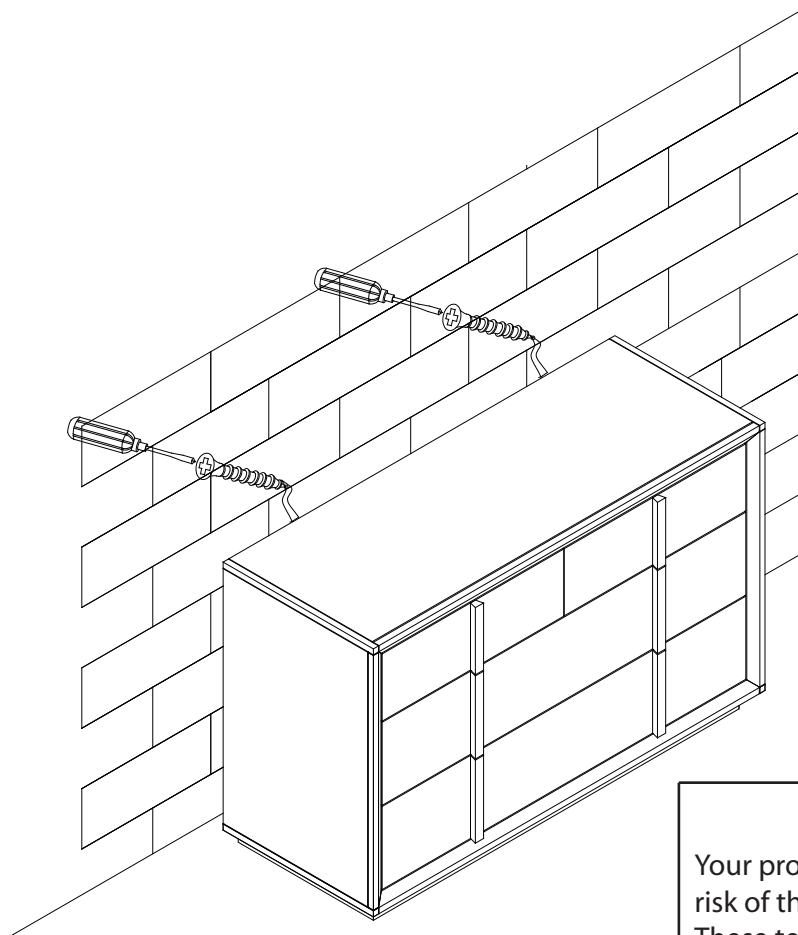

Your product is fitted with tethers to reduce the risk of the product tipping over. These tethers must be secured to the wall behind the furniture. Please consult your local hardware store for the appropriate fixings for your wall type. Ensure you check for internal pipes or electrical cables before drilling